


SPARE PARTS LIST

RED BAND BSC & BSD MASONRY SAW

BS01	Blade Guard 350mm	BS52	Cart Sheave Set
BS02	Blade Guard 450mm	BS53	Wood Cart Top
BS03	Water Feed	BS55	Guide-a-Cut
BS04	Adaptor	BS56	Connecting Bar
BS05	Tap	BS57	Extension Set
BS06	Hose	BS58	Foot Pedal
BS07	Water Pump Assy	BS60	Eye Bolt
BS08	Pump Drive End	BS61	Tension Spring
BS09	Pump Impellor End	BS62	Rubber Buffer
BS10	Impellor	BS63	Pedal Stop Bar
BS11	Sieve	BS64	Emergency Stop Assy – Petrol
BS12	Outer Cover	BS65	Starter Assy – 110V
BS13	Inner Drive Cable	BS66	Starter Assy – 220V
BS15	Pump Pulley	BS67	Starter Interior – 110V
BS16	Pivot Bearing	BS68	Starter Interior – 220V
BS18	Head Base	BS69	Starter Assy – 415V
BS19	Hand Grip	BS70	Starter Interior – 415V
BS20	Starter Bracket	BS71	Motor 3HP 110V
BS21	Spanner 22mm	BS72	Motor 5.5HP 415V
BS22	E.S.B. Bracket	BS73	Engine 6HP Honda GX200RX
BS23	Spanner 19mm	BS74	Electric Water Pump (110V or 220V)
BS24	Blade Shaft	BS75	Foot Pedal – BSD
BS25	Blade Shaft Bearing	BS76	Pivot Plates (Pair) – BSD
BS26	Inner Collar 35	BS77	Back Bar – BSD
BS27	Inner Collar 45	BS78	Fixing Set – BSD
BS28	Bearing Plate	BS79	Feed Tube – BSD
BS29	Outer Collar 35	BS80	Handle Assy – BSD
BS30	Outer Collar 45	BS81	Feed Bearing – BSD
BS31	Bolt – Blade Shaft	BS82	SG Safety Gripper
BS32	Bolt Cover		
BS33	Pulley – Blade Shaft		
BS34	Bearing Cover		
BS35	Key – Blade Shaft		
BS36	Drive Belt – Electric		
BS37	Drive Belt – Petrol		
BS38	Motor Pulley 35 Electric		
BS39	Motor Pulley 45 Electric		
BS40	Engine Pulley 35 Petrol		
BS41	Engine Pulley 45 Petrol		
BS42	Mounting Plate – Petrol		
BS43	Waste Hose		
BS44	Circlip		
BS45	Belt Guard		
BS46	Back Plate		
BS47	Drain Plug		
BS48	Water Curtain		
BS49	Pump Clip		
BS50	Combi. Cart		
BS51	Back Stop		

BSC 35 / 45

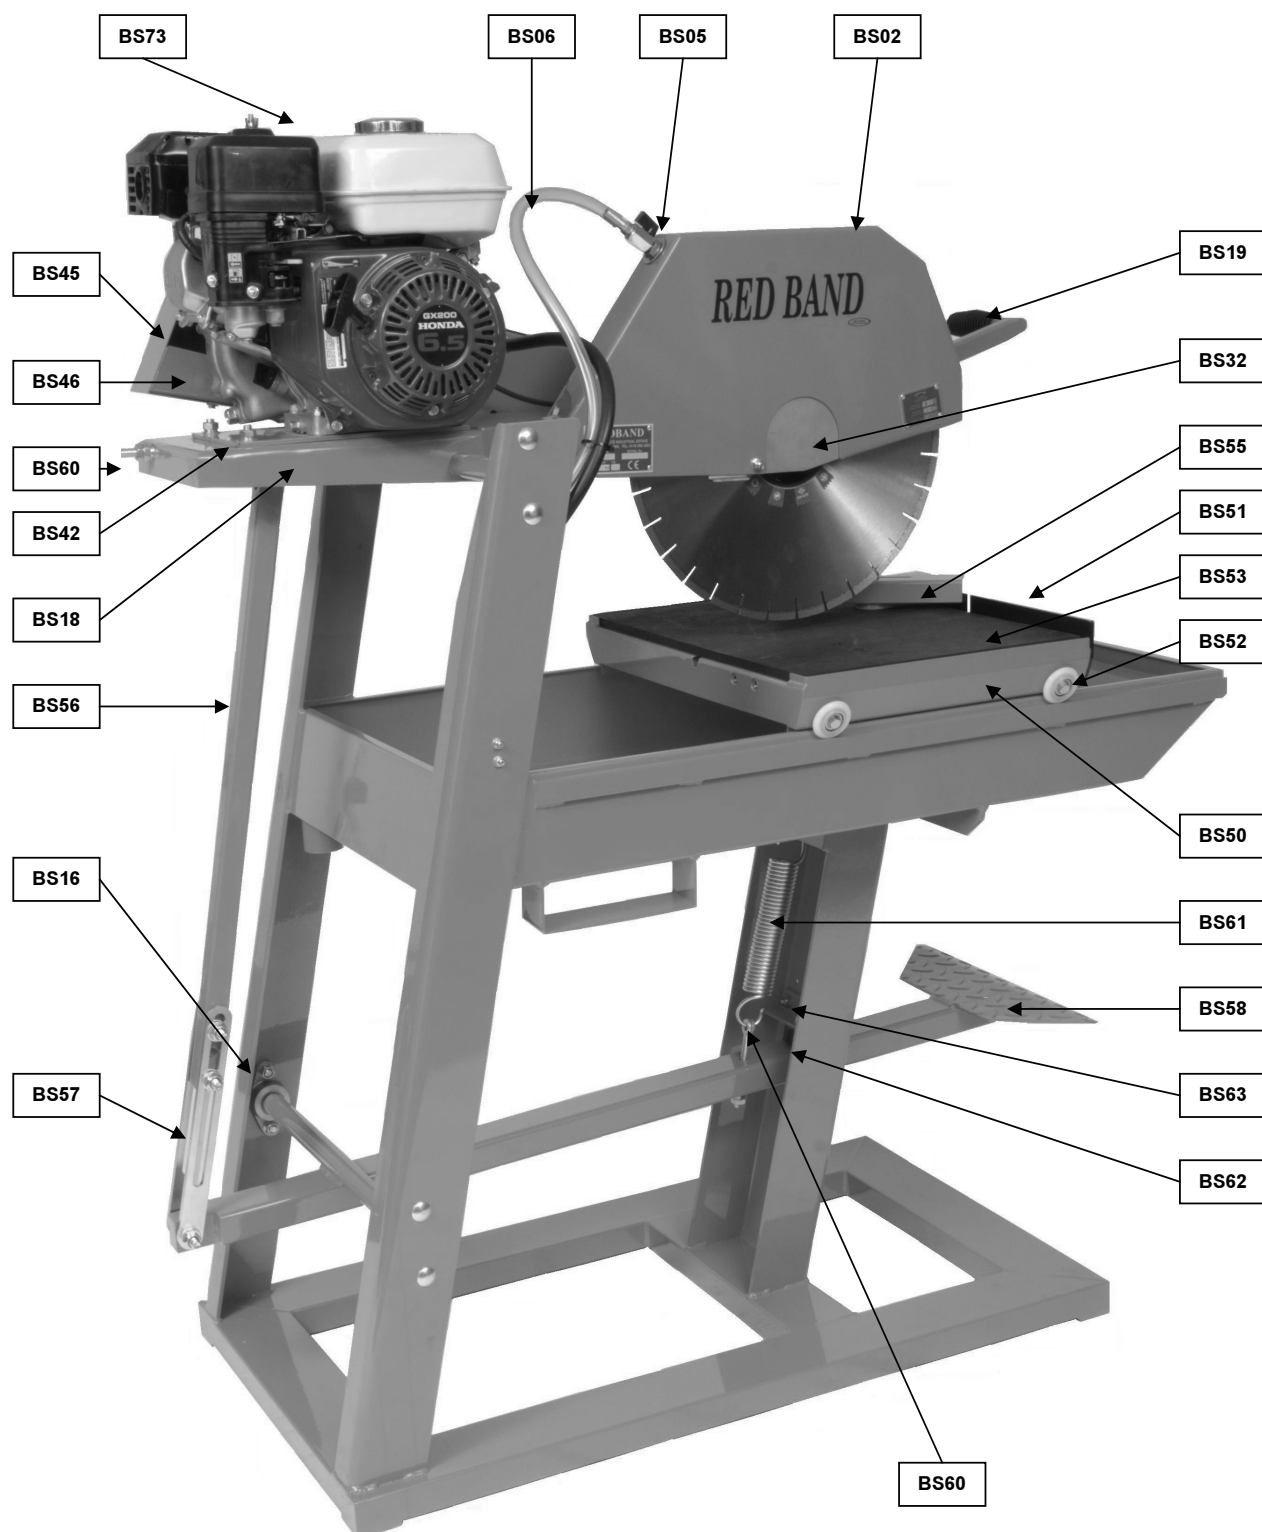

BSD 35 / 45