

## Spare Parts List

Bin No.	Description	Bin No.	Description
GS01	Blade Shaft	GS31	Pump Clip
GS02	Lock Bolt	GS32	Water Bung
GS03	Outer Collar (HBS/ISS-B)	GS33	Cart (HBS)
GS04	Outer Collar (IBS)	GS34	Cart (ISS-B/IBS)
GS05	Inner Collar (HBS/ISS-B)	GS35	Visor
GS06	Inner Collar (IBS)	GS36	Cart Sheave
GS07	Key	GS37	Rails : Pair (ISS-B)
GS08	Bearing – Blade Shaft	GS38	Rails : Pair (IBS)
GS09	Cover Plate	GS39	Belt Guard
GS10	Pulley (Blade Shaft HBS/ISS-B)	GS40	Back Plate
GS11	Pulley (Blade Shaft IBS)	GS41	Belt (Set of 4) (HSS/ISS-B)
GS12	Key - Pulley (Blade Shaft)	GS42	Belt (Set of 4) (IBS)
GS13	Motor Pulley	GS43	Eye Bolt
GS14	Key – Pulley (Motor)	GS44	Spring
GS15	Lock Pin & Chain	GS45	Lock Arm
GS16	Water Feed : Pair (HBS/ISS-B)	GS46	Con. Bar (HBS/ISS-B)
GS17	Water Feed : Pair (IBS)	GS47	Con. Bar (IBS)
GS18	Clamp Assy	GS48	Link Plate Set
GS19	Elbow Assy	GS49	Foot Pedal (ISS-B)
GS20	Tee Piece	GS49A	Foot Pedal (HBS)
GS21	Tap	GS50	Foot Pedal (IBS)
GS22	Hose	GS51	Splash Plate (HBS/ISS-B)
GS23	Electric Water Pump	GS52	Splash Plate (IBS)
GS24	Water Pump H/D	GS53	Pivot Bearings
GS25	Drive End	GS54	Lock Collar
GS26	Water Pump Pulley	GS55	Spanner
GS27	Inner & Outer Cable	GS56	Bearing Cover
GS28	Pump End	GS57	Tilting Table (HBS/ISS-B)
GS29	Impellor	GS58	Tilting Table (IBS)
GS30	Sieve	GS61	Rails : Pair (HBS)
GS101	Blade Shaft Assy (HBS/ISS-B) – inc Shaft, Collars, Bolt, Bearings, Keys – No Pulley		
GS102	Blade Shaft Assy (IBS) – inc Shaft, Collars, Bolt, Bearings, Keys – No Pulley		

# Spare Parts Drawing

